


Single Duct Air Terminal Units

ATU-BP-600 BYPASS AIR TERMINAL UNIT WITH INTEGRAL SOUND ATTENUATOR

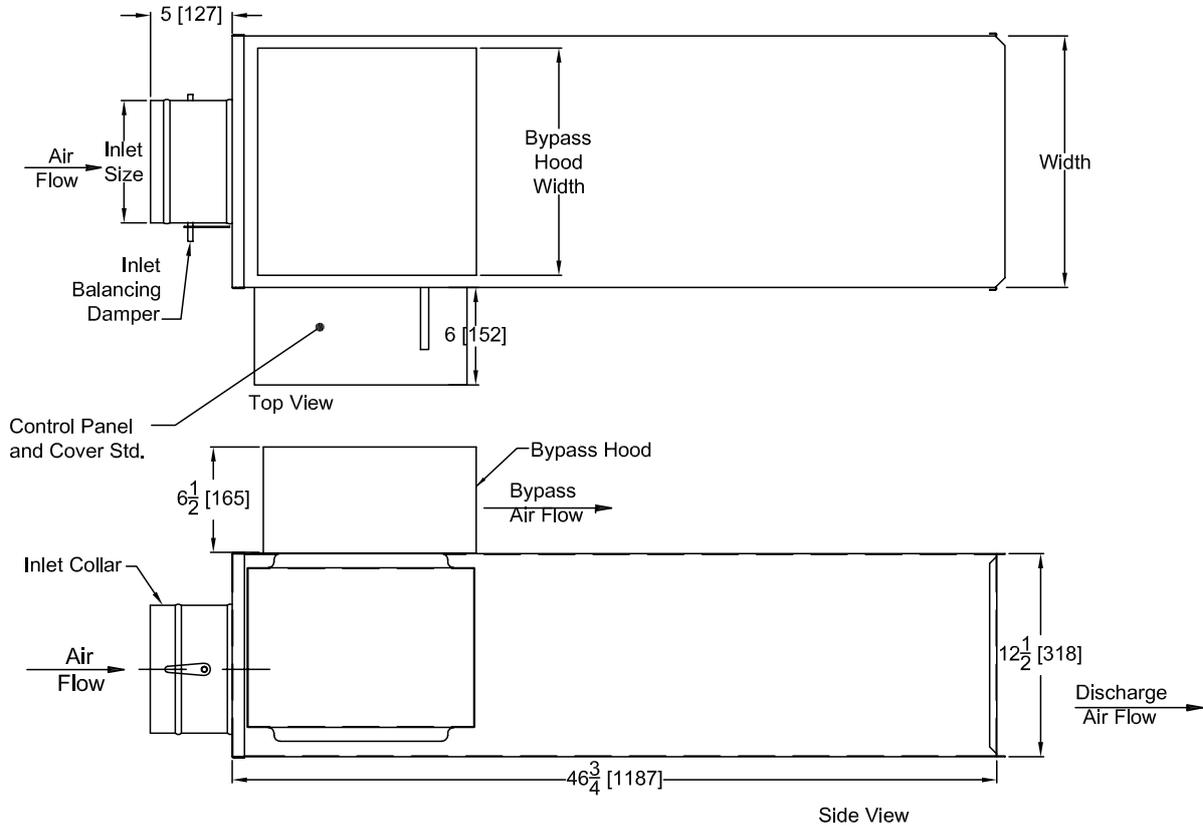

The standard location for control panel is Right Hand on Model BP.
Looking in the direction of airflow, the control panel is on the right.

| Model Number | Nominal Size | CFM Range | Width | Shipping Weight (lbs.) |
|-------------------|----------------|-----------|----------|------------------------|
| ATU-BP 606 | 6 (152) Round | 0-600 | 12 (305) | 37 |
| ATU-BP 608 | 8 (203) Round | 0-1000 | 14 (356) | 42 |
| ATU-BP 610 | 10 (254) Round | 0-1600 | 16 (406) | 47 |
| ATU-BP 612 | 12 (305) Oval | 0-2200 | 18 (457) | 50 |
| ATU-BP 614 | 14 (356) Oval | 0-3000 | 24 (610) | 55 |
| ATU-BP 616 | 6 (406) Oval | 0-4000 | 28 (673) | 62 |