


Single Duct Air Terminal Units

ATU-BP-600 BYPASS AIR TERMINAL UNIT

Note:
Outlet Collar & Bypass Collar
Are Same Size as Inlet Collar

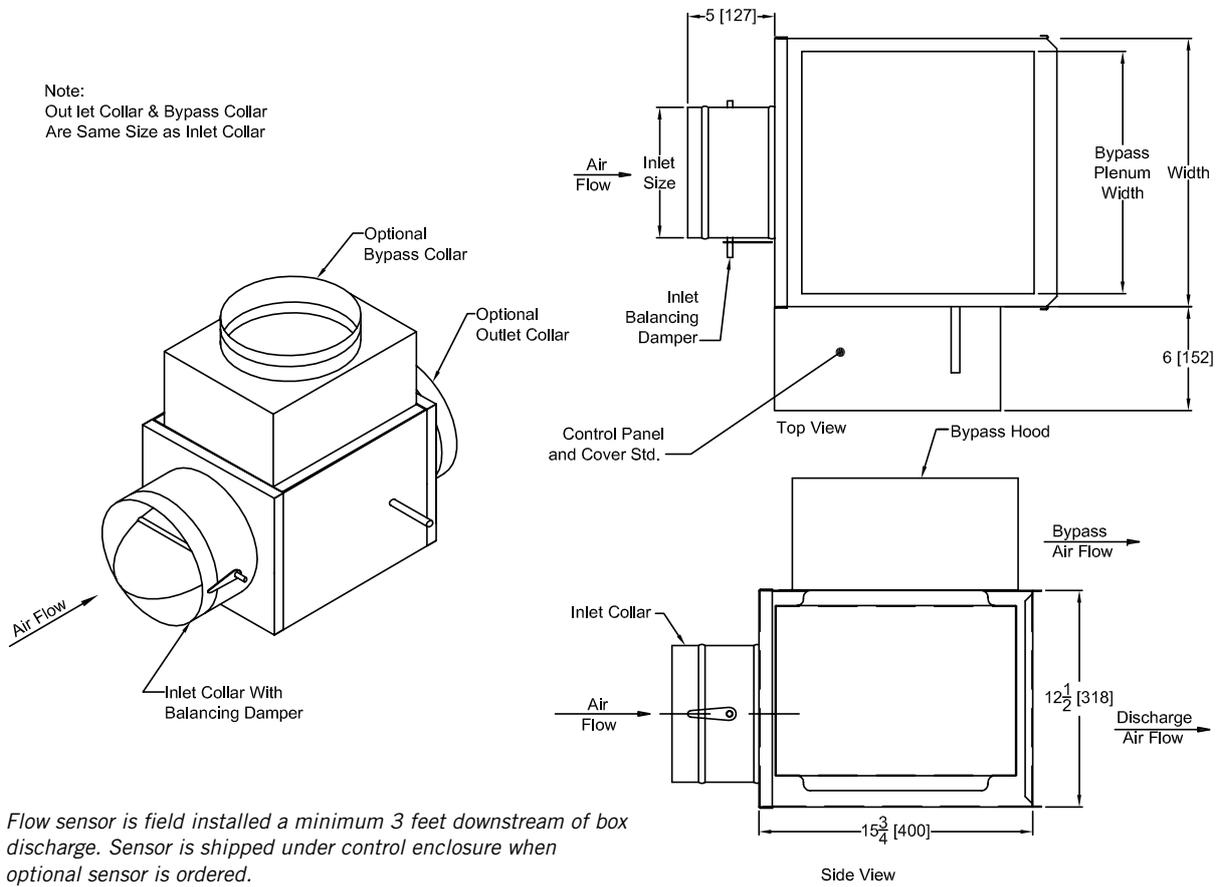

Flow sensor is field installed a minimum 3 feet downstream of box discharge. Sensor is shipped under control enclosure when optional sensor is ordered.

The standard location for control panel is Right Hand on Model ATU-BP. Looking in the direction of airflow, the control panel is on the right.

| Model Number | Nominal Size | CFM Range | Width | Shipping Weight (lbs.) |
|--------------|----------------|-----------|----------|------------------------|
| ATU-BP 606 | 6 (152) Round | 0-600 | 12 (305) | 23 |
| ATU-BP 608 | 8 (203) Round | 0-1000 | 14 (356) | 26 |
| ATU-BP 610 | 10 (254) Round | 0-1600 | 16 (406) | 29 |
| ATU-BP 612 | 12 (305) Oval | 0-2200 | 18 (457) | 31 |
| ATU-BP 614 | 14 (356) Oval | 0-3000 | 24 (610) | 34 |
| ATU-BP 616 | 6 (406) Oval | 0-4000 | 28 (673) | 38 |